


● aluminium & plastics systems

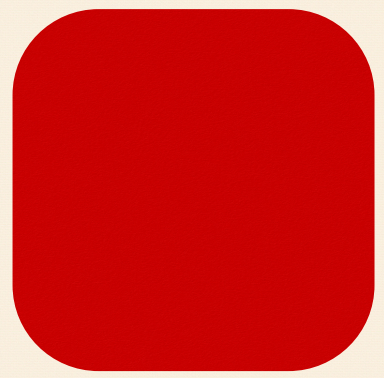

How To Install Composite Fencing



FITTING INSTRUCTIONS

1. Place first post into position, fix post and place foot cover over post.
2. Place next post using bottom rail as a guide.
3. Slide Aluminium bottom rail into place.
4. Slide fence boards into place.
5. Slide Aluminium top rail onto last board and fix with L shape clip and screw.
6. If using decorative screen add to the top.
7. Fit post cap.



● aluminium & plastics systems